
PART 6 - PUBLIC UTILITIES
Division 2 - Water Supply

Subdivision 1 - Owner to Comply

- 6.2.1. 1. Every owner of premises within the District shall, if such premises are to be supplied or are supplied with water from the municipal waterworks system, install, place and maintain in such premises water service connections, fixtures and other apparatus in accordance with the requirements of this Division.

Subdivision 2 - Disposition of Water

- 6.2.2. 1. No person being an owner, occupant, tenant, or inmate of premises supplied with water by the municipality, shall sell or give away such water, or otherwise dispose of the same for other than his own use or benefit, nor shall he permit such water to be carried or taken away from the premises.

Subdivision 3 - Interference with System

- 6.2.3. 1. No person shall make any connections to, or in any way interfere or tamper with any pipe, hydrant, stop-cock, valve, fixture, or other apparatus of the municipal waterworks system unless he has been duly authorized by the Chief Administrative Officer.

Subdivision 4 - Fire Hydrants

- 6.2.4. 1. No person shall obstruct the access to any municipal fire hydrant by placing around or thereon any stone, brick, lumber, dirt, or other material.
2. No person shall open, interfere or tamper with any municipal fire hydrant unless he has been duly authorized by the Chief Administrative Officer.

Subdivision 5 - Inspection of Premises

- 6.2.5. 1. Every person to whom water is supplied under this Division shall at all reasonable times allow, suffer and permit the Municipal Engineer, or any person authorized for such purpose, either generally or in a particular instance, to enter into and upon the premises in respect of which such water is supplied, for the purpose of inspecting the same, and the water pipes, connections, fixtures, taps, meters and other apparatus used in connection with such water supply, and to carry into effect the provisions of this Division.

Subdivision 6 - Temporary Discontinuance

- 6.2.6. 1. The municipality may temporarily discontinue the supply of water to any premises for the purposes of extension, maintenance, and repair of the municipal waterworks system.

Subdivision 7 - Vacating of Premises

- 6.2.7. 1. When a house is vacated, the stop-cock on the inside of the building shall be turned off by the party leaving the house, or by the owner.

Subdivision 8 - Violation by Owner

- 6.2.8. 1. In the case of any continuing violation of the provisions of this Division, the Chief Administrative Officer may cause the disconnecting of the service pipe to, and withhold the supply of water from the premises where such violation occurs until there is full compliance with the provisions of this Division.
2. Whenever a service connection has been disconnected in accordance with the provisions herein, the cost of such disconnection together with the cost of reconnecting shall be charged to the owner of the property for which such work has been performed.